



### Instructions for adjusting the position indicator

Our position indicator is maintenance-free, unpowered and is used to display the penstock plate setting. Proceed as follows to adjust the position indicator after the threaded slide gate has been installed:

1. Turn the penstock plate to the "closed" position
2. Pull the position indicator rubber seal (see picture 1) away upwards
3. Loosen the set screw (see picture 2)

#### Method 1:

- 4a. Pull the position indicator upwards
- 4b. Retighten the set screw (see picture 2)
- 4c. Rotate the position indicator until the display is pointing to "0000/0"
- 4d. Loosen the set screw (picture 2)
- 4e. Push the position indicator down again until it is in its initial position and engaged (see picture 3) so that twisting is prevented

#### Or method 2:

- 4a. Rotate the hollow shaft until the display is pointing to "0000/0"
- 4b. Tighten the set screw

5. Push the position indicator rubber seal back into position
6. Open and close the Penstock to check the indicator

Penstock closed: „0000/0“

Penstock opened: "Lifting height of threaded slide gate in millimeters"

